



Spot Cleaner PR 5020

Dampf- Und Fleckenreiniger

Steam & Spot Cleaner

Buhar & Leke Temizleyici

Очиститель Паров И Пятен

منظف البخار والبقع

بخار و لکه پاک کن



DE Benutzerhandbuch

EN User Manual

TR Kullanım Kılavuzu

RU Руководство По Эксплуатации

AR دليل استخدام

FA راهنمای کاربر

DE Gewährleistungszertifikat

EN Warranty Certificate

TR Garanti Belgesi

RU Гарантийный Талон

AR شهادة الضمان

FA ضمانت نامه



Usage Instructions20

Meaning of Symbols.....20

Responsibility20

CE Declaration of Conformity.....20

Intended Use20

Unauthorized Use.....21

Safety Warnings21

Product-Specific Safety Warnings22

Opening the Box23

Contents of the Box24

Technical Information24

Product Parts Introduction25

Product Usage25

Use of the Device26

Areas of Use of the Device.....28

Maintenance and Cleaning of the Device.....29

Device Storage31

Recycling31

Troubleshooting.....32

Shipping32

**Dear Customer,**

We hope you enjoy using your product. Thank you for choosing **Fakir Hausgeräte**, a leader in innovative technologies. Please read this user manual carefully before using the product and keep it for future reference.

Usage Instructions

These usage instructions are prepared to ensure that the device is used properly and safely. For your safety and the safety of others, please read the user manual before operating the device.

Meaning of Symbols

In this user manual, you will see the following symbols:

**WARNING!**

This symbol indicates hazards that could lead to injury or death.

**CAUTION!**

This symbol indicates hazards that could cause damage to your product or malfunction.

**NOTE!**

Indicates important and useful information in the user manual.

Responsibility

Fakir Elektrikli Ev Aletleri San. ve Tic. A. Ş. accepts no responsibility for any damage or repairs made outside Fakir Authorized Service Centers or for improper use of the device resulting from non-compliance with the instructions in this user manual.

CE Declaration of Conformity

This device complies fully with the European Union's 2014/30/EU Electromagnetic Compatibility and 2014/35/EU Low Voltage Directives. The product bears the CE mark on the device type label.

Intended Use

The product model is designed for home use. It is not suitable for workplace or industrial use. Any malfunction resulting from such use will not be covered by our authorized service.



Unauthorized Use

In the following cases of unauthorized use, the device may be damaged or cause injuries:

- **Restricted Capabilities and Supervision:** This device should not be used by persons (including children) with limited physical, sensory, or mental capabilities or lack of experience and/or knowledge, unless they are supervised by a person responsible for their safety or given instructions regarding the safe use of the device. Children should be supervised to ensure they do not play with the device.
- **Use with Limited Abilities:** The device can be used by children aged 8 years and above and persons with limited physical, sensory, or mental capabilities or lack of experience and knowledge only if they are supervised, given instructions on safe use, and understand the potential hazards.
- **Packaging Materials:** Keep materials like bags included in the package away from children. There is a risk of suffocation!
- **Cleaning and Maintenance:** Children under 8 years should not clean or maintain the device unless they are supervised.
- **Device and Cable Safety:** Keep the device and its cable out of the reach of children under 8 years old. Children should be supervised to ensure they do not play with the device. Electrical devices are not toys for children. Therefore, use and store the device out of the reach of children. Children may not be aware of the dangers associated with the use of an electrical device. Ensure the power cord does not hang down from the device.

Safety Warnings

When using an electrical device, always follow the precautions below to prevent fire, electric shock, and personal injury:

- **Read the User Manual:** Carefully read the information in the user manual and keep it for future reference. If you give the device to a third party, be sure to include the manual.
- **First Use:** When you remove the product from its packaging, make sure all accessories and attachments are complete. If any parts are missing, contact your nearest Fakir Authorized Service Center. Keep the protective bags of the accessories and attachments away from children and infants to prevent the risk of suffocation.



- **Check the Condition of the Device:** If you suspect that there is any issue with the device, its casing, cable, or plug, do not operate the device and contact the nearest Fakir Authorized Service Center.
- **Cable and Plug Safety:** Do not use the device if the power cord or plug is faulty or damaged. Do not use the device with an extension cord and ensure that the power cord does not come into contact with heat sources or sharp edges. When unplugging, always pull the plug itself, not the cord. Do not pull on the cord or lift the device by the cord.
- **Child Safety:** Never leave the machine unattended while it is plugged in. Do not allow children to play with the device unsupervised. Store the device's power cord out of the reach of children. Electrical devices are not toys for children.
- **Use of the Device:** Do not use the device outdoors. Your machine may be adversely affected by dirt or rain. Do not immerse the machine in water and protect it from rain or moisture. The device operates with electrical power, which poses an electric shock hazard. Therefore, do not touch the plug with wet hands. Do not use the device to clean flammable or explosive materials (e.g., gasoline or alcohol), burning or smoldering objects (e.g., cigarettes, matches, or hot ashes).
- **Maintenance and Cleaning:** Before cleaning and maintenance, unplug the device and allow it to cool down.
- **Usage Restrictions:** Use the electrical device only as intended. Using the device contrary to the instructions may shorten its lifespan and pose safety risks.

Product-Specific Safety Warnings

- For indoor household use only. Do not use the appliance for commercial or industrial cleaning purposes.
- Do not touch the hose, spray, or steam outlet parts while the device is operating. High temperatures may cause burns.
- Do not apply steam to the same surface for an extended time in steam mode. This may cause warping or discoloration.
- Do not continue using the appliance when the dirty water tank is full. Empty the tank before further operation.

- Only fill the clean water tank with cold tap water. Do not use descalers, alcohol-based solutions, perfumed liquids, or chemical cleaners.
- When using the steam function, avoid sensitive surfaces like polished wood, lacquered finishes, leather, or untreated parquet flooring.
- Ensure the water tank lids are tightly closed before use. Otherwise, leakage may occur.
- The cable must not come into contact with hot surfaces, and the hose and cable should not be overly stretched during use.
- Do not remove the water tanks while the device is heating or in operation. This may lead to burns or spills.
- After each use, allow the appliance to cool completely and empty the dirty water tank. Otherwise, hygiene risks may occur.
- Keep the steam outlet accessories out of the reach of children. Accidental spraying can cause serious burns.
- Only use original accessories and parts. Incompatible accessories may damage the device or impair functionality.
- After cleaning is complete, properly wind the hose and power cord for storage. Excessive bending or tension may shorten the cable's lifespan.
- Keep away from foodstuffs.
- Do not come into contact with the body.
- May cause allergies.



Carefully read the safety rules and usage instructions in this user manual.

Keep this user manual for future reference.

Opening the Box


- Before first use, remove the device and accessories from the box and check for damage or defects. If the device is damaged or defective, do not use it and contact **Fakir Authorized Service**.
- Repairs should only be performed by Fakir Authorized Service Centers.
- Repairs by unauthorized persons may be harmful to the user.



 WARNING!

Do not use a faulty or defective product.


Contents of the Box

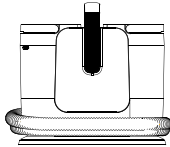

Machine



Cleaning
brush

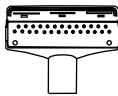

Wide
brush



Small
brush




Rubber
cover



Self cleaning
tool



Pin

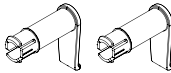

Winding
support



Manual

Technical Information


Voltage : 220-240V
Frequency : 50-60Hz
Power : 1650 W
Max vacuity : 13kPa

IP rating : IPX4
Clean water tank : 1.4 L
Dirty water tank : 1.0 L


 NOTE!

The values indicated on the device or in other printed documents provided with the product are obtained under laboratory conditions according to relevant standards. These values may change depending on the product's use and environmental conditions.

Product Parts Introduction

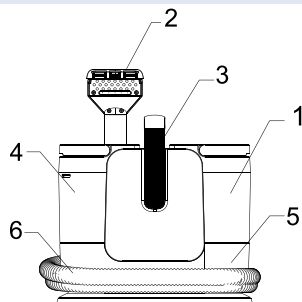


1. Clean water tank
2. Cleaning brush
3. Control display
4. Dirty water tank
5. Host
6. Hose

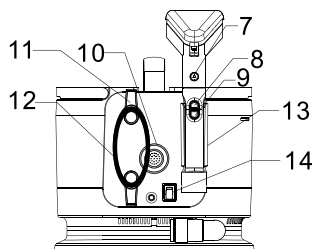


8. Confirm button
9. Start/stop button for spray
10. Voice output port
11. Winding support
12. Power cord
13. Handle support
14. Turn ON/OFF Switch


Product Usage

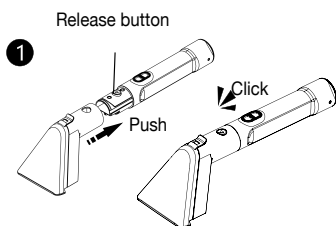


Insert the brush to the handle, till hear click voice

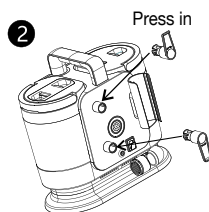

Install 2pcs winding support and handle support

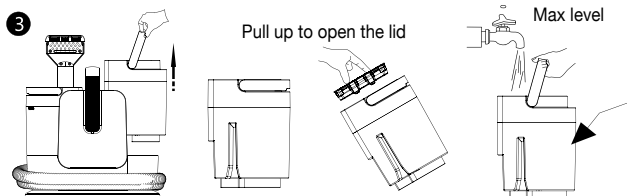

Remove the clean water tank and fill it with water

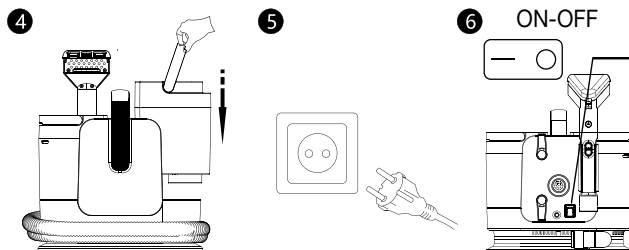


After filling the water, put the tank back into the machine

Just plug in the power supply

Turn on the power switch

Use of the Device


Step-1

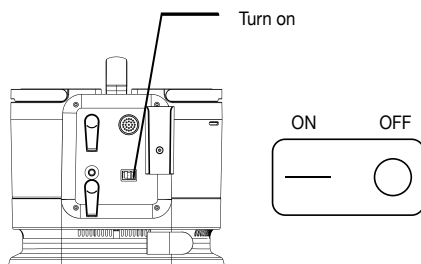

Turn on the power switch

Step-2

Click confirm button once to turn on the vacuum motor click again to turn off vacuum. Please wait for seconds till turn off the vacuum motor.

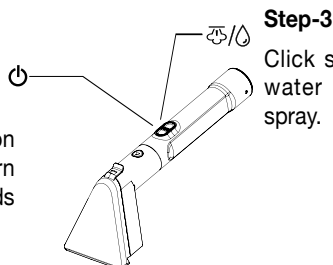



Step-3

Click spray button once to start water pray, click again to stop spray.

NOTE!

- The button light is on, indicating that it is turned on.
- The button light is off, indicating that it is turned off.
- Please do not press the handle button repeatedly in a short period of time.

Four efficient cleaning modes for you to choose

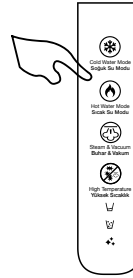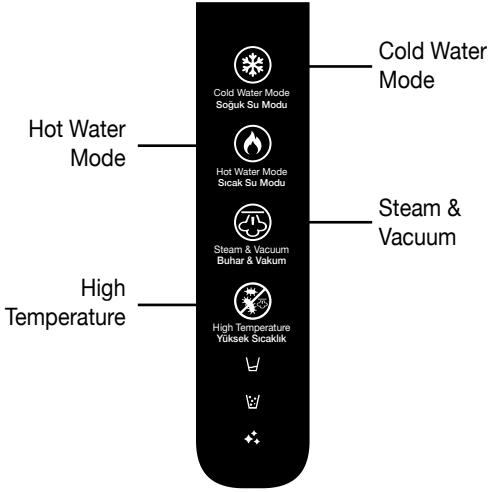


Cleaning Mode 1
Press the
Hot Water Mode icon



Cleaning Mode 2
Press the
Cold Water Mode icon



Cleaning Mode 3
Press the
Steam & Vacuum
icon

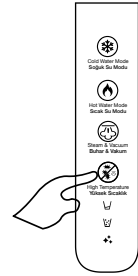

Cleaning Mode 4
Press the
High Temperature
icon

WARNING!

- Do not press handle button repeatedly in a short period of time.
- It is recommended to use the Hot clean mode first to clean the dirt then use the steam & vacuum mode to assist in achieving better cleaning.


NOTE!

- The values declared in the markings on the product or in other printed documents supplied with the product are the values obtained in the laboratory according to the relevant standards. These values may vary according to the conditions of use and environment of the product.
- Before using the hot water and steam modes on surfaces like carpets or sofas, please check the fabric's washing instructions and use these modes only if suitable.


Areas of Use of the Device

Cleaning brush usage


Designed to work on various fabrics, including carpets, rugs, upholstery, car interiors, and more. This versatility ensures that you can effectively clean and treat stains on different surfaces without the need for additional cleaning products or equipment.

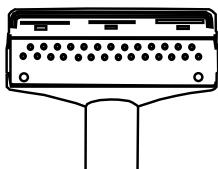


Wide brush

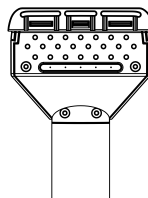


Cleaning brush

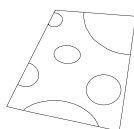

Carpet

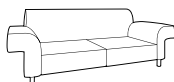

Sofa

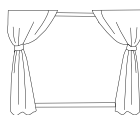

Curtain




Doll



Mattress




Pet bed

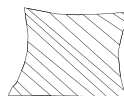

Cushion

Rubber Cover

Remove the cover of the cleaning brush and replace it with a silicone cover, designed for various hard floors, mirrors, glass, doors and windows, etc.

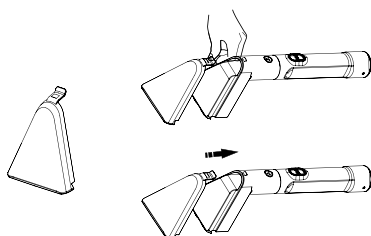

Remove cleaning brush cover Assembly the rubber cover



Window




Mirror



Hard floor

Use of the Small Brush Attachment

The small brush attachment is designed for cleaning fabric shoes and is not recommended for cleaning leather shoes. It can also be used for cleaning tile joints.

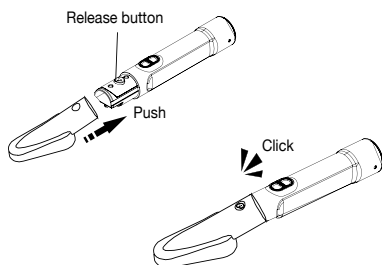

Fabric Shoes



Hard floor


WARNING!

Don't use with any detergent or chemical cleaner.

Maintenance and Cleaning of the Device


Dirty Water Tank

1

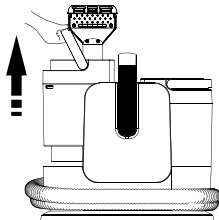

Hold the handle remove the tank.

2

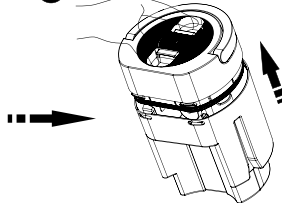


Press release buttons to remove the cover.

3



Clean the dirty tank.

4

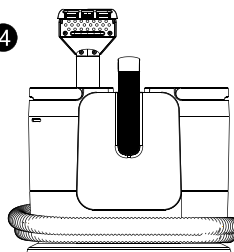


Assembly Complete.

 NOTE!

- To maintain product performance, please clean the dirty tank regularly. If there is too much dirty water in the tank, the suction of the machine may be weakened.
- If it is not used for a long time, please clean the dirty tank in time, otherwise it will produce odor.
- If the dirty tank is full, please clean the tank in time, otherwise the machine will not work properly.

 NOTE!


- **For the safety and long-term use of the device, the dirty water tank must not be reattached to the device before it is completely dry.**
- **If the dirty water tank is attached before it is fully dry, water may come into contact with the electrical connection points, which can cause electrical or mechanical malfunctions.**
- **After cleaning, the inside and outside surfaces of the tank, especially the areas that may touch the device's electrical connection points, should be carefully wiped with a soft cloth or left to dry for a few hours without direct sunlight exposure.**
- **The tank should only be reattached once it is completely dry.**
- **Except for cleaning the dirty water tank, water or moisture should not come into contact with the electrical connection points of the device.**

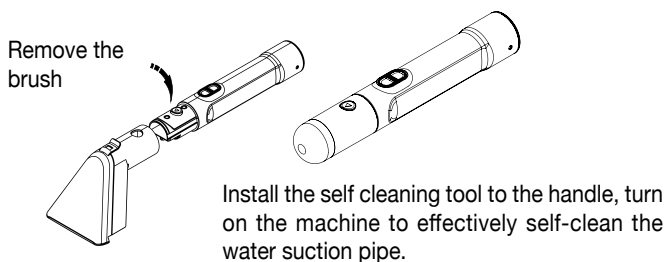Self-Cleaning Mode **WARNING!**

Before performing any maintenance procedures, the plug must be unplugged.


Cleaning Brush

- When the cleaning brush is clogged, please remove the transparent cover, and then use chopsticks or other tools to clean the brush inside.
- When the cleaning brush is entangled with hair, please clean the hair and dirt from the brush.

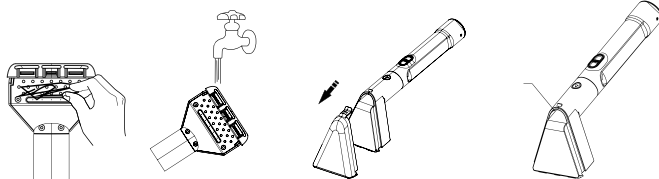


Clean and wash any accumulated dirt and hair after use.

Clean the brush inside

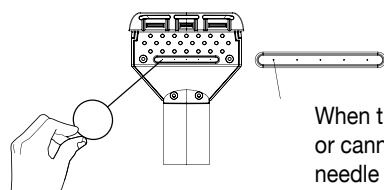

When the spray or water is too little or cannot be sprayed. Please use the needle to clear the water outlet.

Handle part

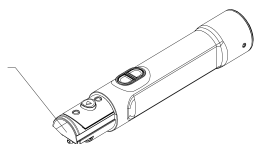

When the handle inlet is clogged, please use chopsticks or other tools to clean the handle inlet.



WARNING!

Before performing any maintenance procedures, the plug must be unplugged.

Device Storage

- If you do not plan to use the appliance for a long while, store it in a cool and dry place.
- Ensure that the appliance is unplugged and its parts are completely dry.
- Ensure that the appliance is kept out of reach of children.

Recycling

When your product reaches the end of its life, follow these steps for proper recycling:

- Cut the device's cable to make it unusable.
- Dispose of the device in designated waste bins for such devices according to the applicable laws in your country.



- Electrical waste should not be disposed of with household waste.
- Throw the device into bins designated for electrical waste.
- The device's packaging is made from recyclable materials.
- Dispose of packaging materials in appropriate recycling bins.
- The device complies with the 2
- The device complies with the WEEE (Waste Electrical and Electronic Equipment) Directive.



NOTE!

- Check if you can fix the problem or defect yourself before calling customer service. For this, please refer to the “**Troubleshooting**” section. If you cannot resolve the issue or defect, call customer service.
- Before calling, please have the **model name** and product **serial number** ready. You can find this information on the **product's type label**.

Help Hotline: (+90 212) 444 0 241

Troubleshooting

Your device has undergone quality control to avoid any defects. However, if the device does not work for any reason, please try the solutions listed in the following table before contacting Fakir Authorized Service.

Problem	Possible Cause	Solution
No working after turning on	The plug is not well plugged.	Turn it off, plug in well, turn on again.
	The cord is damaged.	Contact the service agent.
	Temperature is too high.	Suggest to use the machine between 0°C-50°C ambient temperature.
No water comes out or little water comes out after pressing the spray button	Spray water mouth is blocked.	Clean the mouth with pin.
	Clean water tank without water	Fill the water to the tank.
	Internal water tube is clogged or broken.	Contact the service agent.
No suction or weak suction power	Dirt blocking the suction port	Clean the dirt
	The dirty water tank is full.	Clean the dirty water tank timely
	The hose is not in good status	Check to make sure hose is in well status.
Abnormal noise	Suction port is blocked or large garbage is sucked in.	Clean the dirt or garbage.
	The vacuum motor is broken.	Contact the service agent.

Shipping

To prevent damage to the device, follow these steps to transport your device safely:

- Transport the device in its original packaging.
- If the original packaging is not available, use a suitable and soft packaging that protects the device.